




# NUCLEUS<sup>®</sup> PROTON<sup>®</sup>

**DIGITALLY CONTROLLED MIXING VALVE**

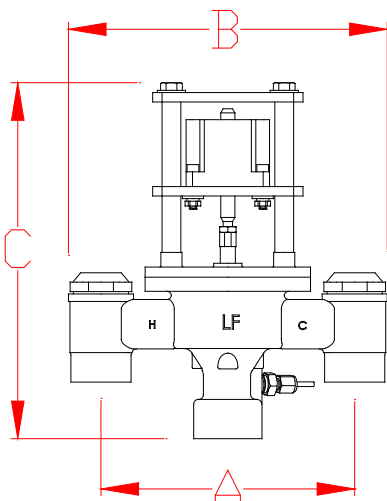

**A = 6-3/4" ± 1/2"      B = 8-1/2" ± 1/2"**  
**C = 9-1/2" ± 1/2"      Depth = 4-1/2" ± 1/2"**

## STANDARD CONTROL BOX



**\*\*NOTE:** The valve will maintain temperature with 0.0 GPM flow from the domestic hot water loop when properly installed near the hot water source with a continuously operating recirculation pump at 3 GPM.

## NEW "ENHANCED FEATURE SET" CONTROL BOX

**SEE SELECTABLE OPTIONS PAGE 2**



**This product meets Low Lead requirements of wetted surface area containing less than 0.25% lead by weight**

**Product is non-cancellable and non-returnable from date from order with factory. Signed submittal required with purchase order.**

Submittal Data Sheet S-PNV-125-LF  
August, 2026

# PNV-125-LF

- Digital Mixing Valve with 1" inlet angled check stops, 1-1/4" Outlet and RTD Sensor, Factory assembled and tested
- 1" NPT inlets, 1-1/4" NPT outlet (25mm X 32mm)
- Valve controls at times of no use, 0.0 GPM\*\*
- Maximum operating pressure: 200 PSIG (1376 KPA)
- Controls water temperature to +/- 2°F in accordance with ASSE 1017
- Controls water temperature to +/- 2°F during times of low / no system demand
- Self-Balancing, do not need to adjust or balance recirculation
- Self-Cleaning, daily shuttle sweep keeps shuttle free of debris
- Automatic Hot/ Cold Water shutoff upon cold/ hot water inlet supply failure
- Alerts user when unit requires maintenance
- User programmable set point range between 65°F and 180°F
- Simple/intuitive user commissioning and setup
- Displays outlet temperature
- UL Listed control box and 120V plug in power supply with 6' cord, optional BPS below
- Suitable for indoor use only
- Not for use in process applications nor intended to deliver final temperature control
- Primary use as an ASSE 1017 Distribution Valve/Master Mixer in a Domestic Hot Water System when combined with proper downstream protection devices approved to ASSE 1016, 1069, 1070 or 1071

## OPTIONS:

\_\_\_\_ **BPS** – Back-up Power Supply, uninterruptable power supply with up to 2 hours run time in case of primary power loss

**Valve is ASSE 1017 Certified**



**Valve is CSA Certified**



**Valve electronics are UL Certified**



**LEONARD<sup>®</sup>**  
WATER TEMPERATURE CONTROLS

**1360 Elmwood Avenue, Cranston, RI 02910 USA**

**Phone: 401.461.1200 Fax: 401.941.5310**

**Email: [info@leonardvalve.com](mailto:info@leonardvalve.com)**


**Web Site: <http://www.leonardvalve.com>**

# PNV-CONTROLLER OPTIONS

## Standard Controller 1.0 Version



**A = 6"    B = 4"**  
**Depth = 1-3/4"**

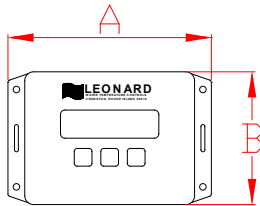

## STANDARD CONTROLLER:

\_\_\_\_\_ **1.0** – See PAGE 1 for info

## ENHANCED CONTROLLER OPTIONS:

\_\_\_\_\_ **2.0** – Enhanced Proton Controller with Programmable Disinfection Mode


### Options:

- \_\_\_\_\_ **3T**– Three Additional Temperature Sensors for Monitoring of Inlet Hot, Inlet Cold, and Return Temperatures
- \_\_\_\_\_ **REL** – 5 Relay Contacts that Switch during Alarm State
  - Helpful for Remote Alerts Within Building to Assist Maintenance and Service Personnel
  - 5 Unique States:
    - Loss of Power
    - Broken Temperature Probe
    - “Out of Range” Temperature ( $\pm 10^{\circ}\text{F}$ )
    - Motor Connectivity and Operation
    - Maintenance (Service Required) @  $< 90\%$  Full travel

## Enhanced Controller 2.0, 2.5, 3.0 Versions



**A = 8"    B = 4-3/4"**  
**Depth = 1-1/4"**

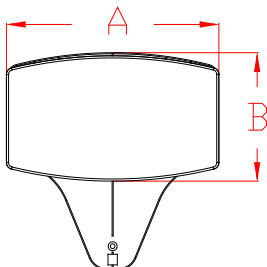

\_\_\_\_\_ **2.5** – Enhanced Proton Controller including all of 2.0 as well as BACnet MS/TP or Modbus RTU Connection which provides ability to serve up all data to BMS system

### Options:

- \_\_\_\_\_ **3T** – Three Additional Temperature Sensors for Monitoring of Inlet Hot, Inlet Cold, and Return Temperatures
- \_\_\_\_\_ **REL** – 5 Relay Contacts that Switch during Alarm State (as shown above)

\_\_\_\_\_ **3.0** – Enhanced Proton Controller including all of 2.5 as well as all items below as standard,

- WiFi – Wifi enabled
- 3T - 3 Additional Temperature Sensors for Monitoring of Inlet Hot, Inlet Cold and Return Temperatures
- REL - 5 Relay Contacts that Switch during Alarm State



**1360 Elmwood Avenue, Cranston, RI 02910 USA**

**Phone: 401.461.1200 Fax: 401.941.5310**

**Email: [info@leonardvalve.com](mailto:info@leonardvalve.com)**

**Web Site: <http://www.leonardvalve.com>**


Leonard Valve Company reserves the right of product, or design modifications without notice or obligation.

© 2026 Leonard Valve Company  
Printed in USA

# PRESSURE DROP

|     |     |     |     |     |     |     |     |     |     |       |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-------|
| 5   | 10  | 15  | 20  | 25  | 30  | 35  | 40  | 45  | 50  | PSI   |
| .3  | .7  | .97 | 1.4 | 1.7 | 2.1 | 2.4 | 2.8 | 3.1 | 3.4 | BAR   |
| 40  | 56  | 66  | 77  | 86  | 95  | 104 | 109 | 114 | 120 | GPM   |
| 151 | 212 | 250 | 291 | 326 | 360 | 394 | 413 | 432 | 454 | l/min |

HIGH TEMPERATURE FIXTURES (IF APPLICABLE)

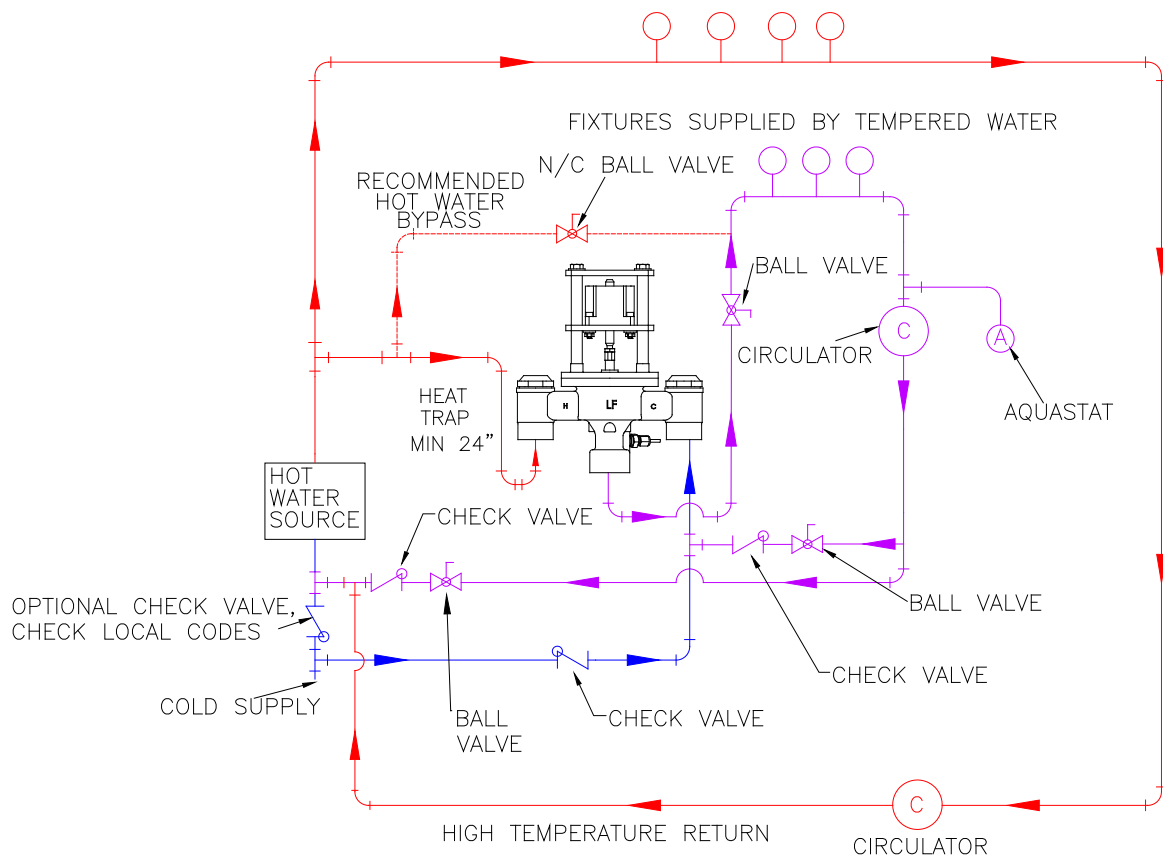

**CAUTION!** All thermostatic water mixing valves have limitations. They will NOT provide the desired accuracy outside of their flow capacity range. Consult the Flow Capacity Chart and DO NOT OVERSIZE. Minimum flow must be no less than as indicated.

**NOTE:** Flow rates will vary depending on existing field conditions. Leonard Valve Company always recommends using CASPAK® sizing software for proper valve sizing and model number applications.

**Engineer's Approval**

Job # \_\_\_\_\_

Arch/Eng. \_\_\_\_\_

Contractor \_\_\_\_\_

Note: The models shown represent Leonard Products which are believed to be equivalent in type and function to items specified. Leonard Valve Company is not responsible for errors or omissions due to differences in interpretations of information provided. Leonard Valve Company reserves the right of product, or design modifications without notice or obligation.



**WARNING:** Risk of cancer and reproductive harm from exposure to lead – See [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

**LEONARD**  
WATER TEMPERATURE CONTROLS

1360 Elmwood Avenue, Cranston, RI 02910 USA

Phone: 401.461.1200 Fax: 401.941.5310

Email: [info@leonardvalve.com](mailto:info@leonardvalve.com)

Web Site: <http://www.leonardvalve.com>